


Technical Data Sheet for: PHT10DI PharmaTherm 10 Dry Ice vs ISTA 7D Summer

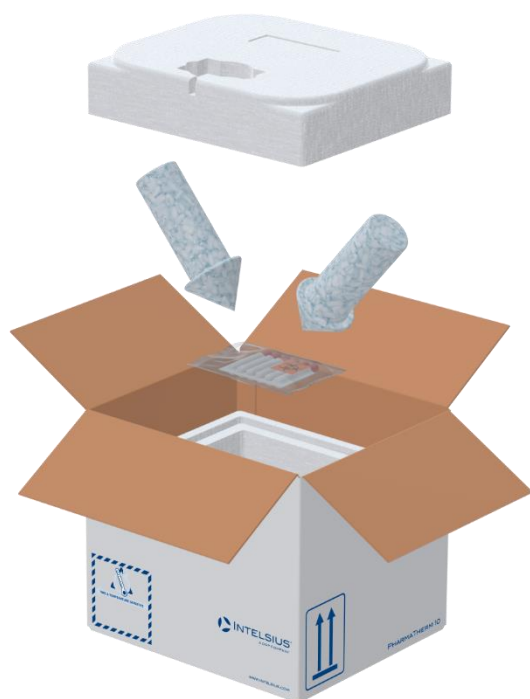


The Intelsius PharmaTherm 10 Dry Ice is a single-use high performance solution qualified against ISTA 7D offering over 74 hours of thermal protection for -20°C temperature sensitive payloads.

The PharmaTherm range utilises dry ice as coolant and Expanded Polystyrene (EPS) as insulation.

The payload probes maintained a temperature of -20°C or below for a duration of 74 hours when tested against ISTA 7D Summer.

Code	Product Name	External Dimensions	Internal Dimensions	Internal Volume	Mass	Volumetric Weight L/6
PHT10DI	PharmaTherm 10 Dry Ice	356 x 305 x 303 mm 14.0 x 12.0 x 11.9 in	258 x 208 x 198 mm 10.1 x 8.1 x 7.8 in	10.6 L	0.6 kg 1.5 lbs	5.5 kgvol ^c 12.1 lbsvol ^c



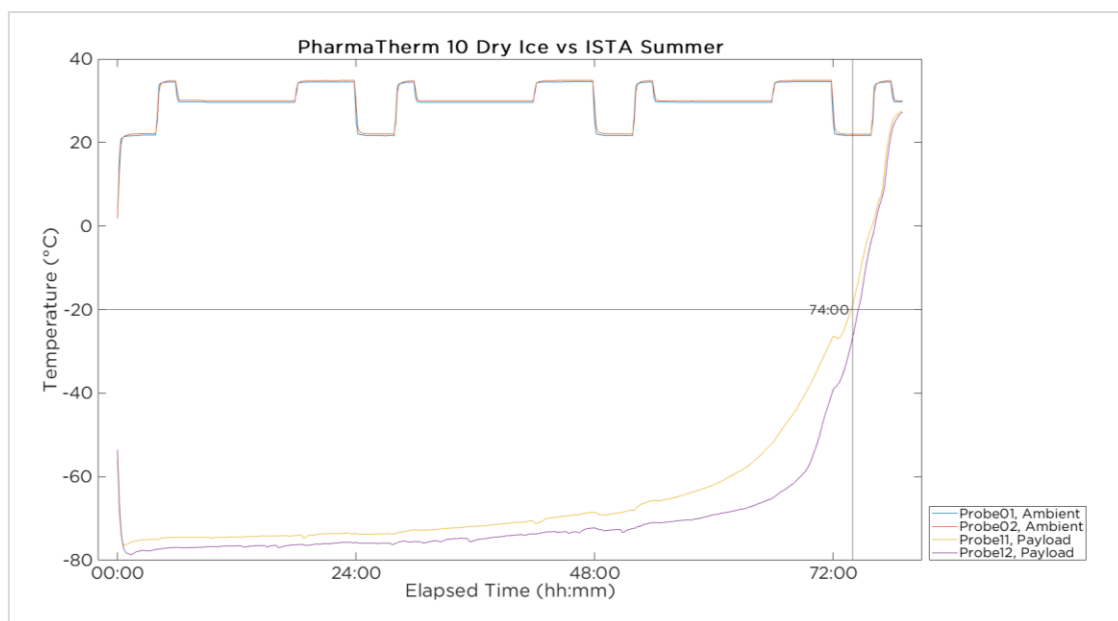

The International Safe Transit Association (ISTA) 7D Summer profile is a 24 hour stepped thermal exposure between +22°C and +35°C.

Summer Duration (hh:mm)
74:00